

RHINO M10p




IN THE BOX

- 1. Rhino M10p
- 2. AC/DC 24v power cable
- 3. Kettle cord
- 4. Sim pin
- 5. Tempered glass screen protector*
- 6. 1 roll of printer paper*
- 7. VESA mount plate*

^{*}If purchased with the Rhino M10p




POWER ON YOUR RHINO M10p

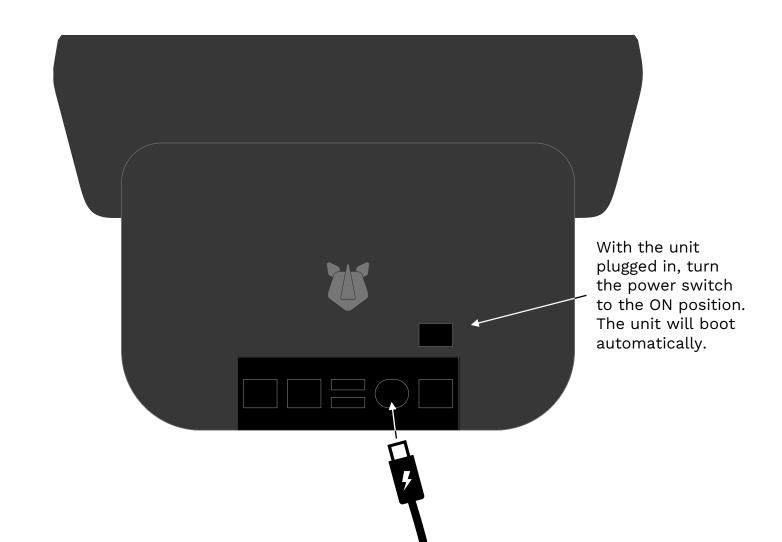



CONNECT TO ETHERNET

Plug the ethernet cable into the port indicated. Android will detect and use ethernet for internet automatically.

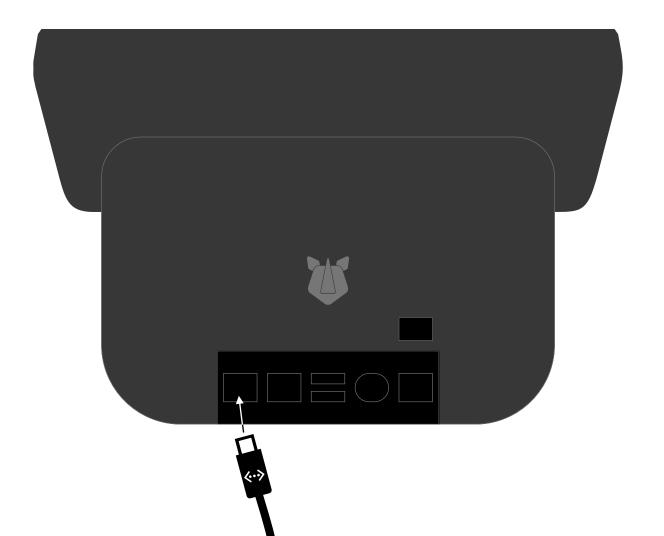



ADJUST THE VOLUME

There are three pin-hole buttons on the side of the M10p. Use the top and bottom pin-hole buttons to adjust volume up and down respectively (middle is power).


Use the provided SIM pin for this.





ACCESS THE PRINTER



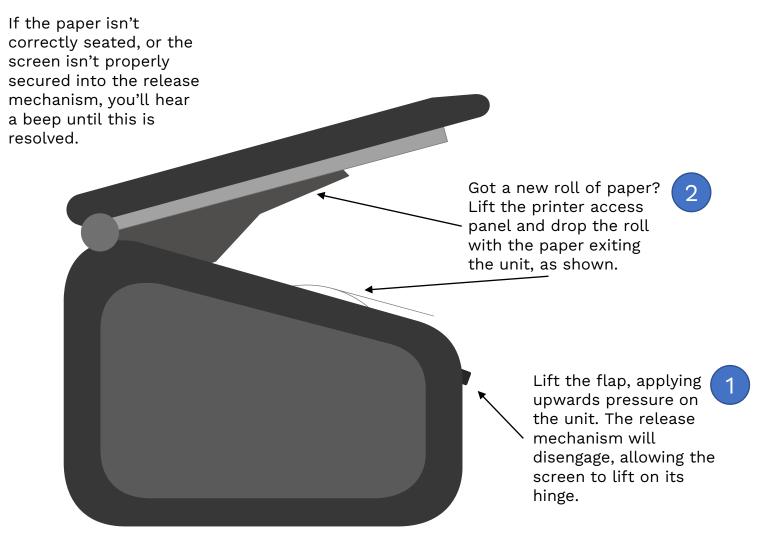



INSERT A SIM/MICROSD



Don't lose the screw or the access panel. Function won't be affected but the internal PCB will become exposed.

- With the M10p switched off, open up the unit, then flip it over and place it screen-down on a soft, flat surface. A towel on a table is a good choice.
- With a small + head screwdriver, unscrew the access panel and gently lift it out. Don't lose the screw!

The SIM and MicroSD slots will now be exposed. Gently slide them to unlock, then lift their hinged locking mechanisms.

Place into position the SIM and/or MicroSD, close the mechanism and slide it to lock it into place.

<u>\</u>i/

If you did this with the unit switched on, you may need to power-cycle for the SIM to be picked up by Android.



GOOD TO GO

For further guidance, please see the full user guide located at:

support.rhinomobility.com/devices/m10p